


BOORSJABLOON / DRILLING TEMPLATE

FOR ABS COVERPLATE
EVA-AA-09 INSTALLATION HOUSING ABS
FOR POLYESTER/LINER AND CONCRETE

 Drill holes 6 mm, drill only these.

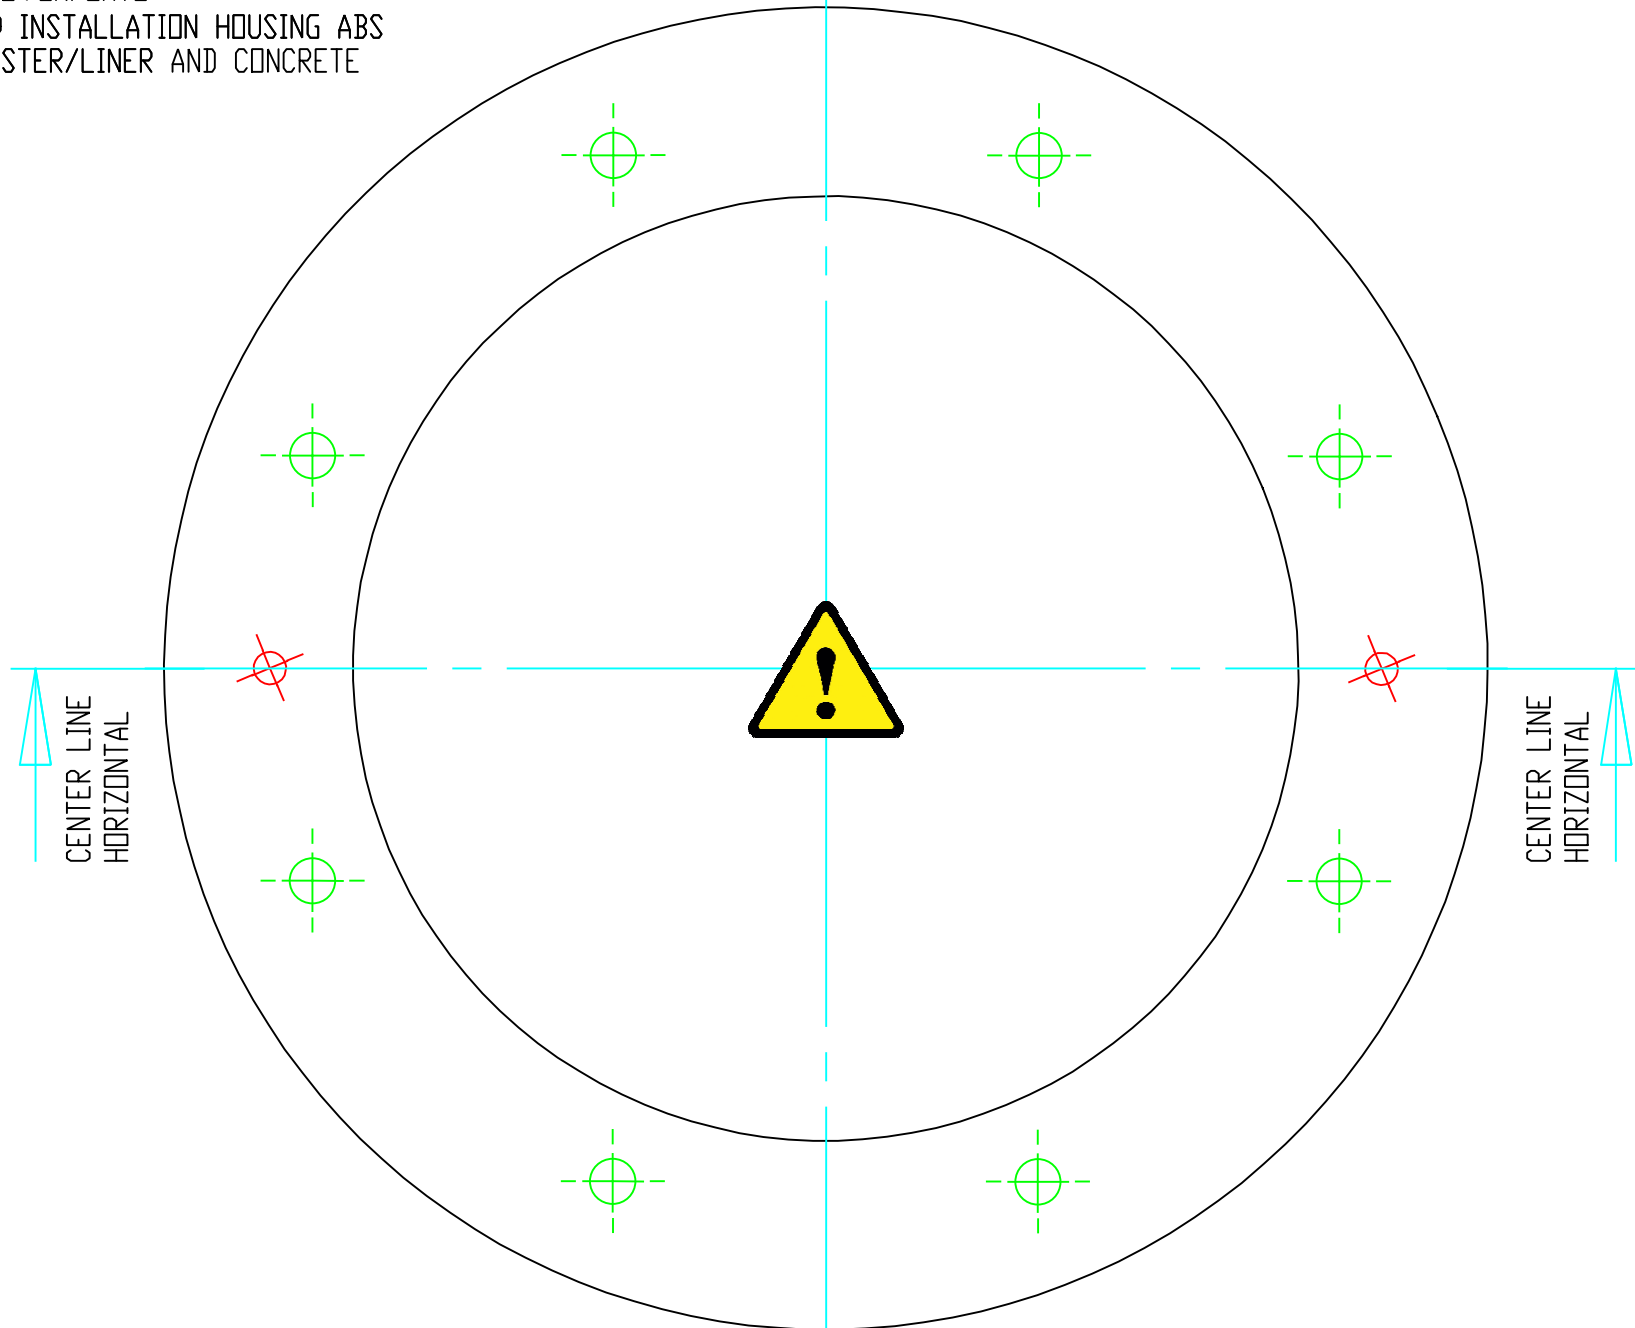


TEMPLATE ONLY FOR USE ABS COVER PLATE FOR SS316 COVER PLATE SEE OTHER SIDE

BOORSJABLOON / DRILLING TEMPLATE

FOR SS316 COVERPLATE
EVA-AA-09 INSTALLATION HOUSING ABS
FOR POLYESTER/LINER

 - Drill holes 6 mm, only drill these.

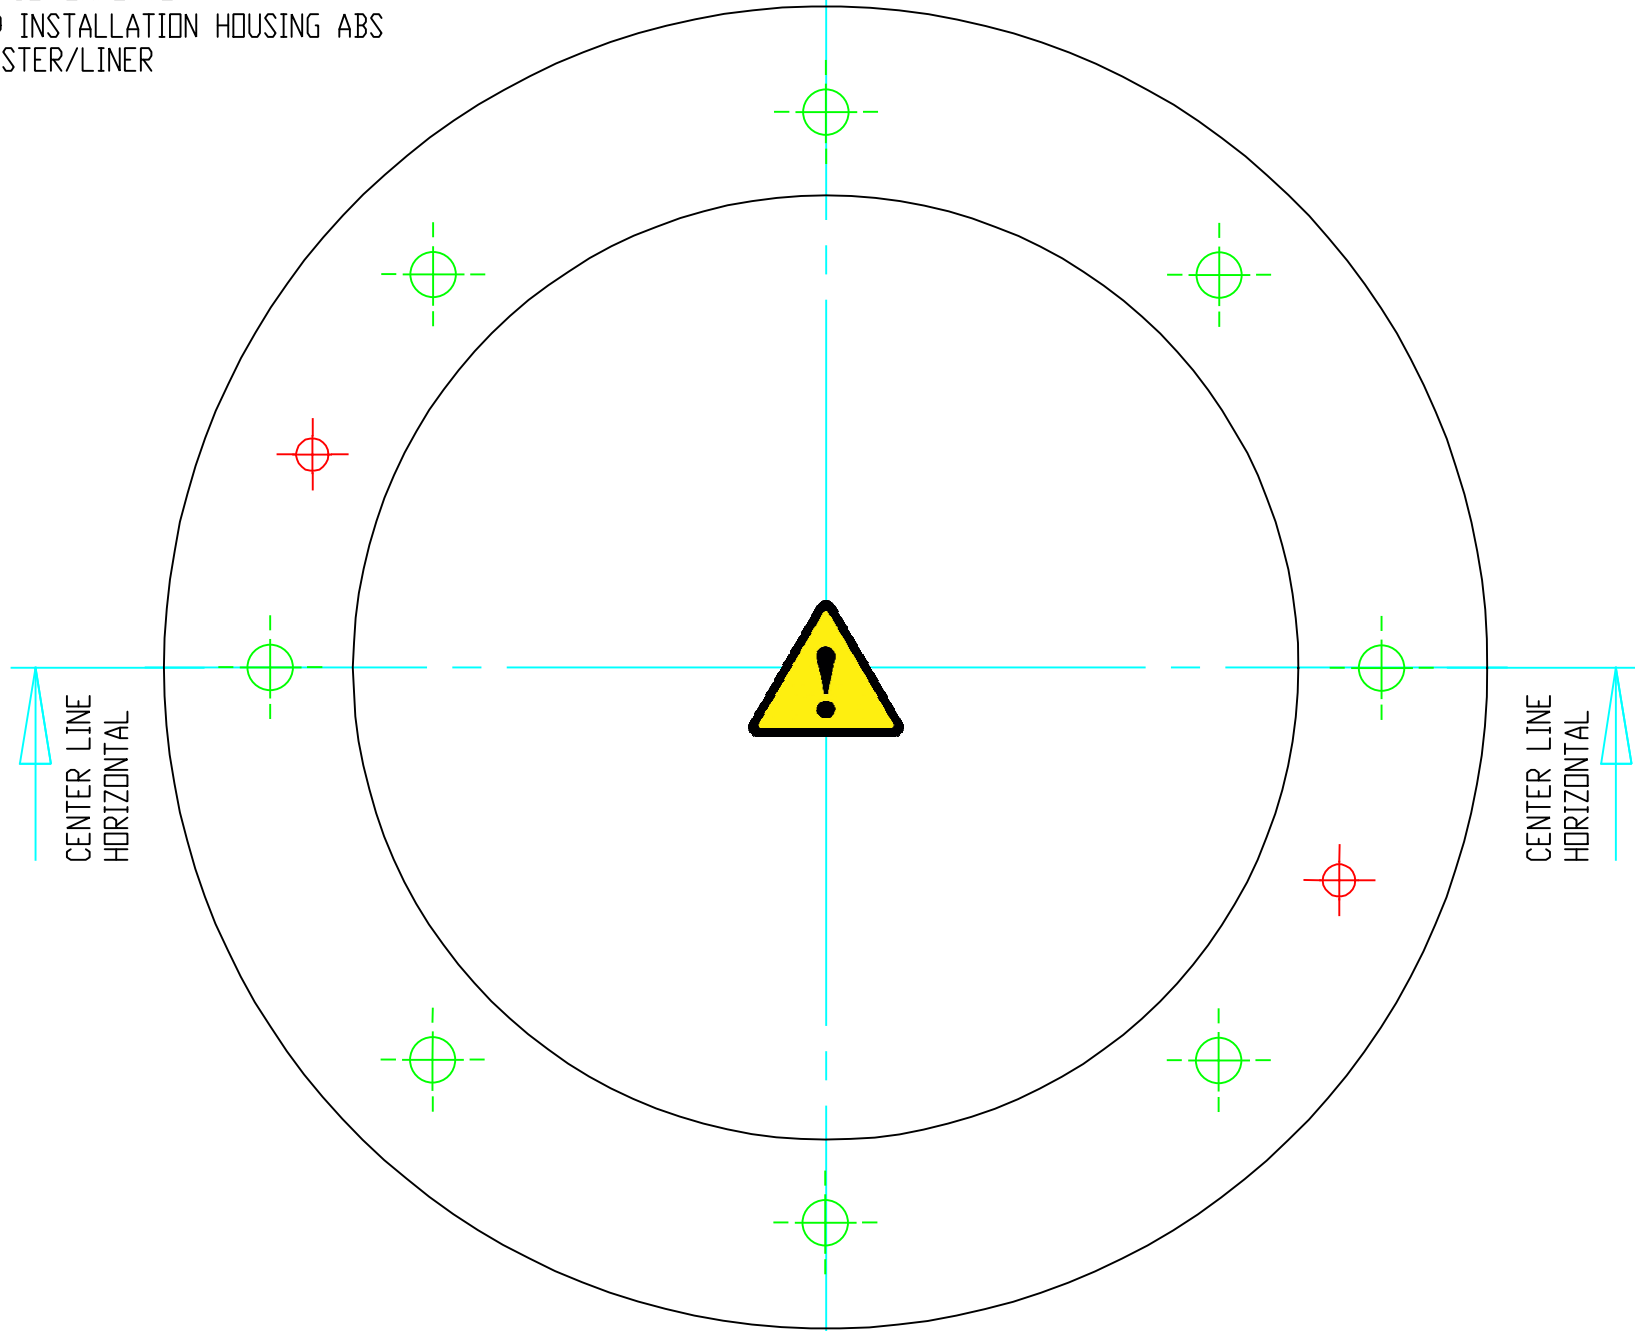

TEMPLATE ONLY FOR USE SS316 COVER PLATE FOR ABS COVER PLATE SEE OTHER SIDE